


BLT A180M Product Manual



Laser Cutting Head

BLT A180M-Q+/ADD/QP-24

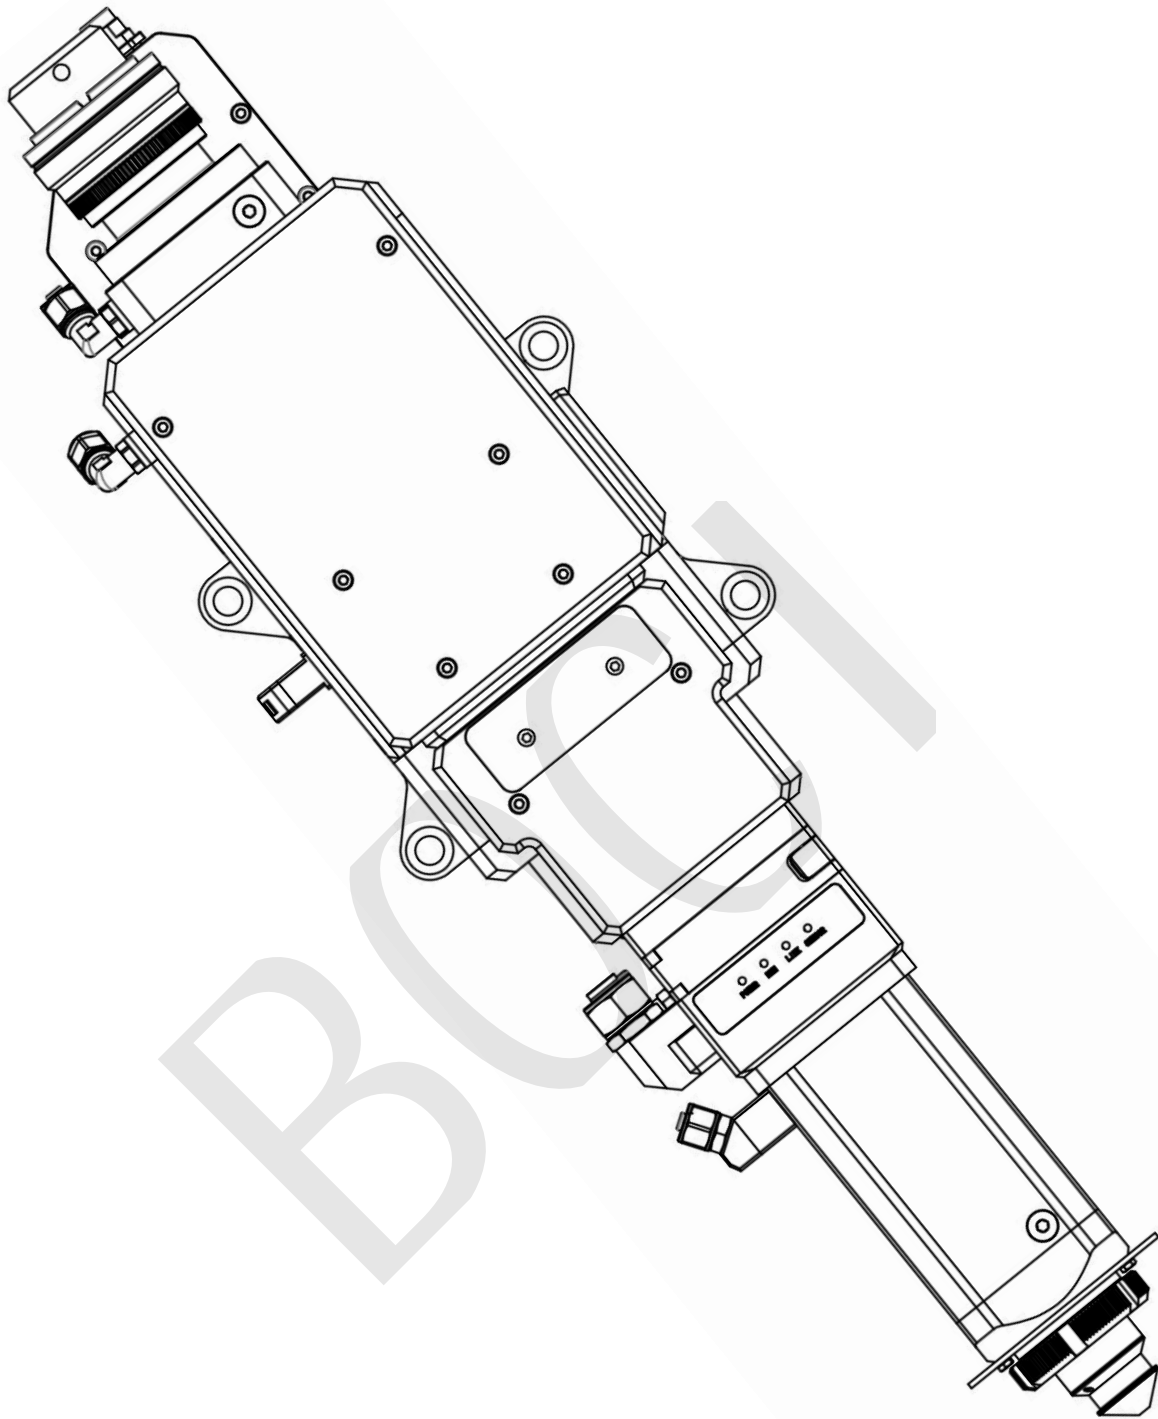

Brilliant Optical Cutting Instrument

Document History

Number	Date	Version
01	2024/8/5	V1.0



Notice:

Thank you for choosing the BLT intelligent cutting head. This manual provides you with important information such as product parameters, installation, and maintenance, so please read this manual carefully before using the product. At the same time, in order to ensure the safety of operation and the operation of the product in the best condition, please strictly follow the precautions in the manual.

BOCI is constantly updating/upgrading products, so our company reserves the right to modify the product models and descriptions in this manual without prior declaration.


Unauthorized disassembly of the product is strictly prohibited without the authorization of BOCI Technology, otherwise the warranty will be invalid!

Table of Contents

1. Product Description	1
1.1 Product View	1
1.2 Technical Parameters	2
1.3 Meaning of LED Indicator	3
2. Gas Interface	4
3. Water Cooling Interface	5
4. Electrical Interface	6
4.1 Hypcut Bus System	7
5. Cutting Head Installation	8
5.1 Preparation before operation	8
5.2 Specific Operation Process	9
5.2.1 Preparation of clean bench	9
5.2.2 The Cutting Head is placed in the clean workbench	9
5.2.3 Clean and wipe the fiber interface of the cutting head	10
5.2.4 Check the laser fiber end face	10
5.2.5 Tear off the protective film/remove the protective cap	10
5.2.6 Insert the laser fiber interface into the cutting head	10
5.2.7 Wrap and Seal	11
5.2.8 Mount the Cutting Head on the backplane	11
5.2.9 Installing the Ceramic Body and Nozzle	12
5.2.10 Beam Centering	13
Appendix A - Care/Maintenance	14
A.1 Schematic Diagram of Product Structure	14
A.2 Replace the 1 st Upper Protective Window	15
A.3 Replace the 1st Lower Protective Window	16
Appendix B - Mechanical Dimensions	17
B.1 Cutting Head Installation Size	17
B.2 BLTA180M Fiber Interface Types	20

1.Product Description

1.1 Product View

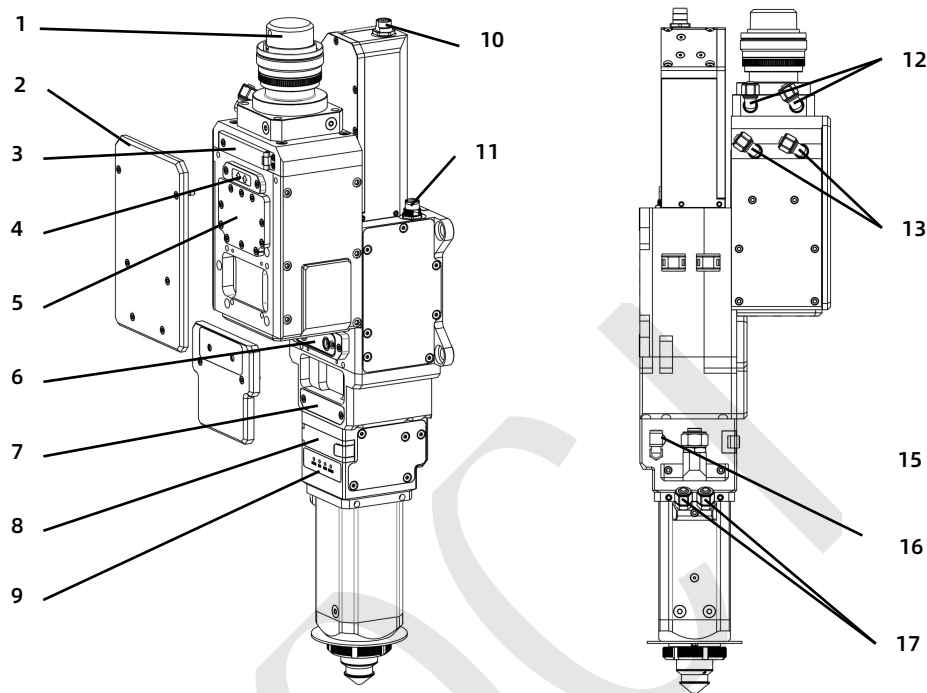

Product View (Structure and Interface Description)

- | | |
|--------------------------------|-------------------------------------|
| 1. Laser Fiber | 10. Visual communication interface |
| 2. Front Cover | 11. PWE Interface |
| 3. 1st Upper Protective Window | 12. Laser Fiber Water Cooling inlet |
| 4. 2nd Upper Protective Window | 13. Pipe Fixation |
| 5. Collimation Unit | 14. Cutting Gas Inlet |
| 6. Focusing unit | 15. Nozzle cooling air interface |
| 7. 2nd Lower Protective Window | 16. Amplifier Cooling Inlet |
| 8. 1st Lower Protective Window | |
| 9. LED Indicator | |

1.2 Technical Parameters

Cutting Head	BLTA180M
Laser Wavelength:	1030-1090nm
Laser Power:	≤60KW
Fiber Interface:	Q+/ADD/QP-24
Spot Magnification:	M=3.0
Max Focus Adjustment Range:	+70mm,-150mm
NA:	Max.0.15 at Fc150
Centering Adjustment Range:	±1.5mm
Focus Acceleration:	7.5m/s ²
Cutting Gas Interface:	ø16, maximum 25bar (2.5Mpa)
Nozzle Cooling Gas Connection:	ø6, maximum 5bar (0.5Mpa)
Water Cooling Interface:	Ø10, maximum 5bar (0.5Mpa), minimum flow 2.0l/min
Operating Temperature:	5 ~ 55°C
Storage Temperature:	-25 ~ +55 °C
Size:	651.6*181.8mm (Q+ Version)
Weight:	About 13 kg (Q+ Version)

Notice:



To avoid damage to the cutting head during storage and transportation, pay attention to the following:

- The cutting head should be stored within the allowable temperature and humidity range.
- Avoid storage in and near magnetic fields such as permanent magnets or strong alternating fields.
- Avoid collision of the cutting head.

1.3 Meaning of LED Indicator


Icon	State	Meaning
POWER	Green	The power supply is OK.
	Red	Undervoltage alarm: Insufficient electric power. Motor abnormality: The motor current consumption is too large, and the mechanical components cannot run smoothly.
	Off	No power supplied: No power, broken or faulty cable, loose connector.
Icon	State	Meaning
RUN	Green	The system is functioning normally.
	Red	The system is running abnormally.
	Off	The cable is broken or faulty, and the connector is loose.
Icon	State	Meaning
LINK	Green	System communication is normal.
	Red	System communication is abnormal.
	Off	The cable is broken or faulty, and the connector is loose.
Icon	State	Meaning
SENSOR	Green	The power supply is OK.
	Red	Undervoltage alarm: Insufficient electric power. Motor abnormality: The motor current consumption is too large, and the mechanical components cannot run smoothly.
	Off	No power supplied: No power, broken or faulty cable, loose connector.

2. Gas Interface

Cutting gas connection



Use $\phi 16$ gas pipe

You need to purchase the $\phi 16$ straight connector additionally, and $\phi 12$ gas pipe is connected by default.

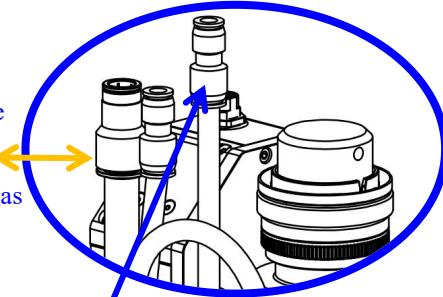

Note: You need to purchase extra $\phi 10$ water pipe to use $\phi 10$ water pipe, and $\phi 8$ water pipe is connected by default.

Nozzle Cooling Gas inlet

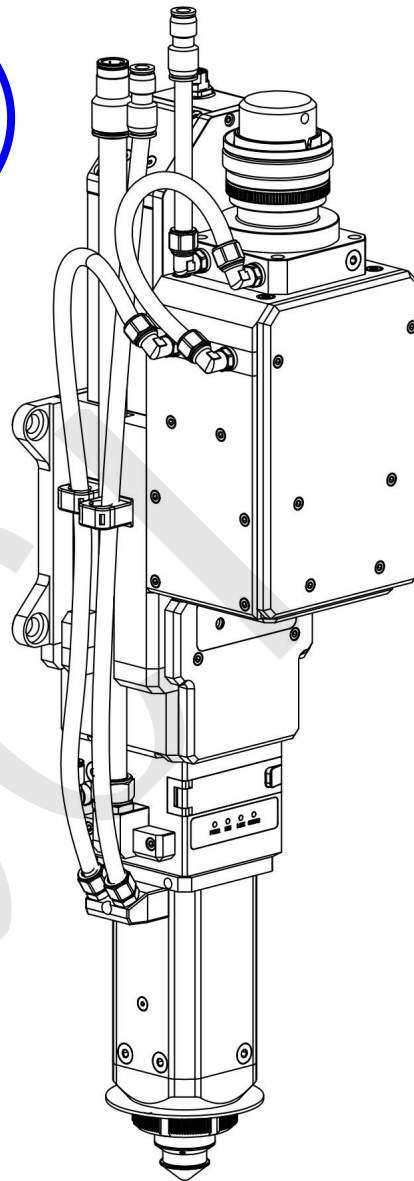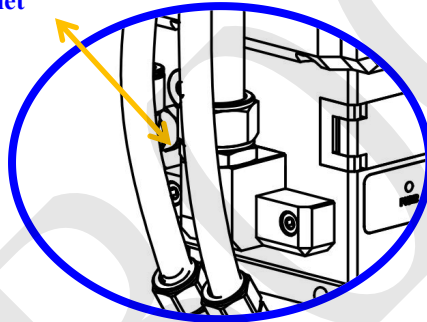

Installation connection: Cutting gas 1, Nozzle cool


Notice:

- The maximum pressure of cutting gas is 25bar (2.5Mpa).
- The cutting gas quality shall meet the requirements of gas quality in accordance with ISO 8573-1:2010: solid particles - class 2, water - class 4, oil - class 3. The purer the cutting gas, the longer the life of the protective lens.
- The cutting gas pipe diameter (outer diameter) is 10mm, and the nozzle cooling gas pipe diameter (outer diameter) is 10mm.

3. Water Cooling Interface

After connecting the laser fiber interface, there are a total of 4 water-cooled modules: 1. Laser fiber interface water-cooled modules (1A and 1B) 2. Fiber interface water-cooled modules (2A and 2B) 3. Cutting head water-cooled modules (3A and 3B) 4. Amplifier water-cooled modules (4A and 4B).

It is recommended that you can connect these 4 water-cooled modules in series first, and then connect to the total water inlet and water outlet.

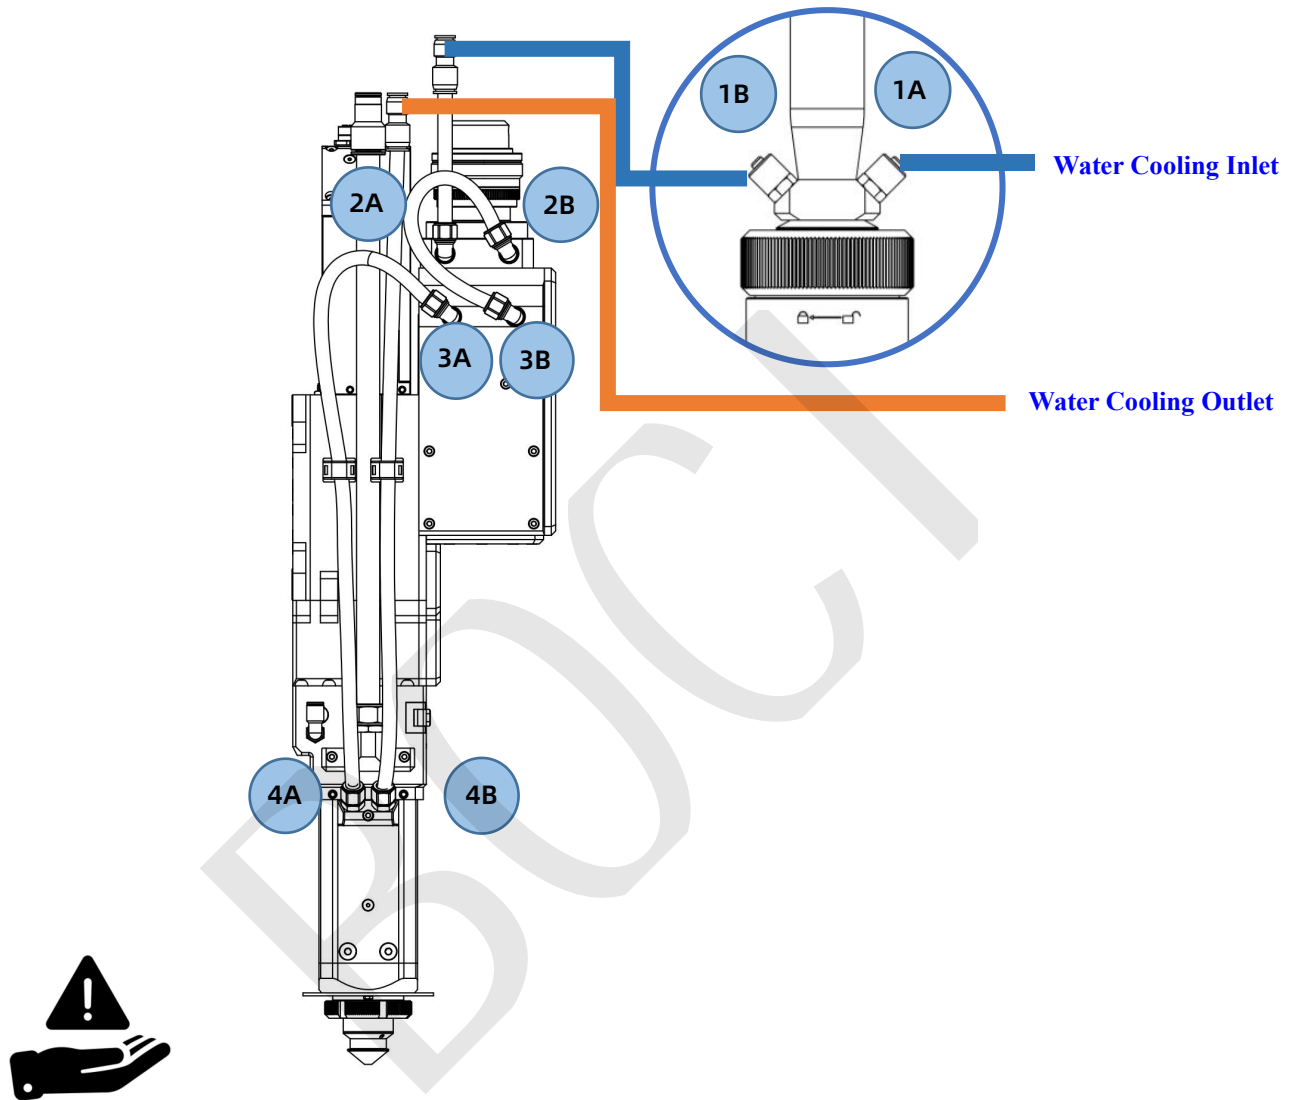

Caution: Installation connection: water-cooled inlet port 2A, water-cooled outlet port 1A

- Pure water or drinking water shall be used for coolant.
- In order to prevent the water in the cooler from growing molds which can cause blockage of the pipeline, it is recommended to add ethanol($\text{CH}_3\text{CH}_2\text{OH}$) when filling pure water, and the amount of ethanol ($\text{CH}_3\text{CH}_2\text{OH}$) added is 10% of the pure water.
- When the ambient temperature around the equipment is $-10^\circ\text{C} \sim 0^\circ\text{C}$, glycol solution with a volume ratio of 30% must be used and replaced every two months.
- When the ambient temperature around the equipment is lower than -10°C , a water cooler with dual system function must be used and the cooling system must be guaranteed to run uninterruptedly.
- Recommended cooling water setting values: cooling water pressure $\leq 5\text{bar}$ (0.5Mpa), water flow rate $\geq 2.0\text{l/min}$.

Dew point temperature at different temperature and humidity


空气温 度 °C		相对湿度%																		
		100	95	90	85	80	75	70	65	60	55	50	45	40	35	30	25	20	15	10
43	43	42	41	40	39	38	37	35	34	32	31	29	27	24	22	18	16	11	5	3
41	41	39	38	37	36	35	34	33	32	29	28	27	24	22	19	17	13	8	3	0
38	38	37	36	35	34	33	32	30	29	27	26	24	22	19	17	14	11	7	0	
35	35	34	33	32	31	30	29	27	26	24	23	21	19	17	15	12	9	4	0	
32	32	31	31	29	28	27	26	24	23	22	20	18	17	15	12	9	6	2	0	
29	29	28	27	27	26	24	23	22	21	19	18	16	14	12	10	7	3	0		
27	27	26	25	24	23	22	21	19	18	17	15	13	12	10	7	4	2	0		
24	24	23	22	21	20	19	18	17	16	14	13	11	9	7	5	2	0			
21	21	20	19	18	17	16	15	14	13	12	10	8	7	4	3	0				
18	18	17	17	16	15	14	13	12	10	9	7	6	4	2	0					
16	16	14	14	13	12	11	10	9	7	6	5	3	2	0						
13	13	12	11	10	9	8	7	6	4	3	2	1	0							
10	10	9	8	7	7	6	4	3	2	1	0									
7	7	6	6	4	4	3	2	1	0											
4	4	4	3	2	1	0														
2	2	1	0																	
0	0																			

4. Electrical Interface

PWE and aviation plug interface waterproof precautions:

1. PWE interface and air plug interface are equipped with dust plugs from the factory. If the dust plug does not fall off, the protection level of IP64 can be achieved; at the same time, when the PWE cable and the air plug cable are well connected, IP64 can also be achieved;
2. After the dust plug is removed, the protection level of IP64 cannot be achieved. If it encounters spraying or flushing at this time, it will cause water to enter the product and affect the function;
3. Ensure that the water circuit is connected well, and the water pipe interface is tightened before removing the dust plug to prevent the water pipe from accidentally loosening and water rushing to the interface, causing the product to enter the water;
4. When adjusting the wiring, remove the dust plug for wiring. It is recommended to keep the removed dust plug of the PWE interface. Install the dust-proof plug as soon as possible after the stitches are removed to prevent accidental water ingress in the transfer, water connection and other links.

4.1 Hypcut Bus System

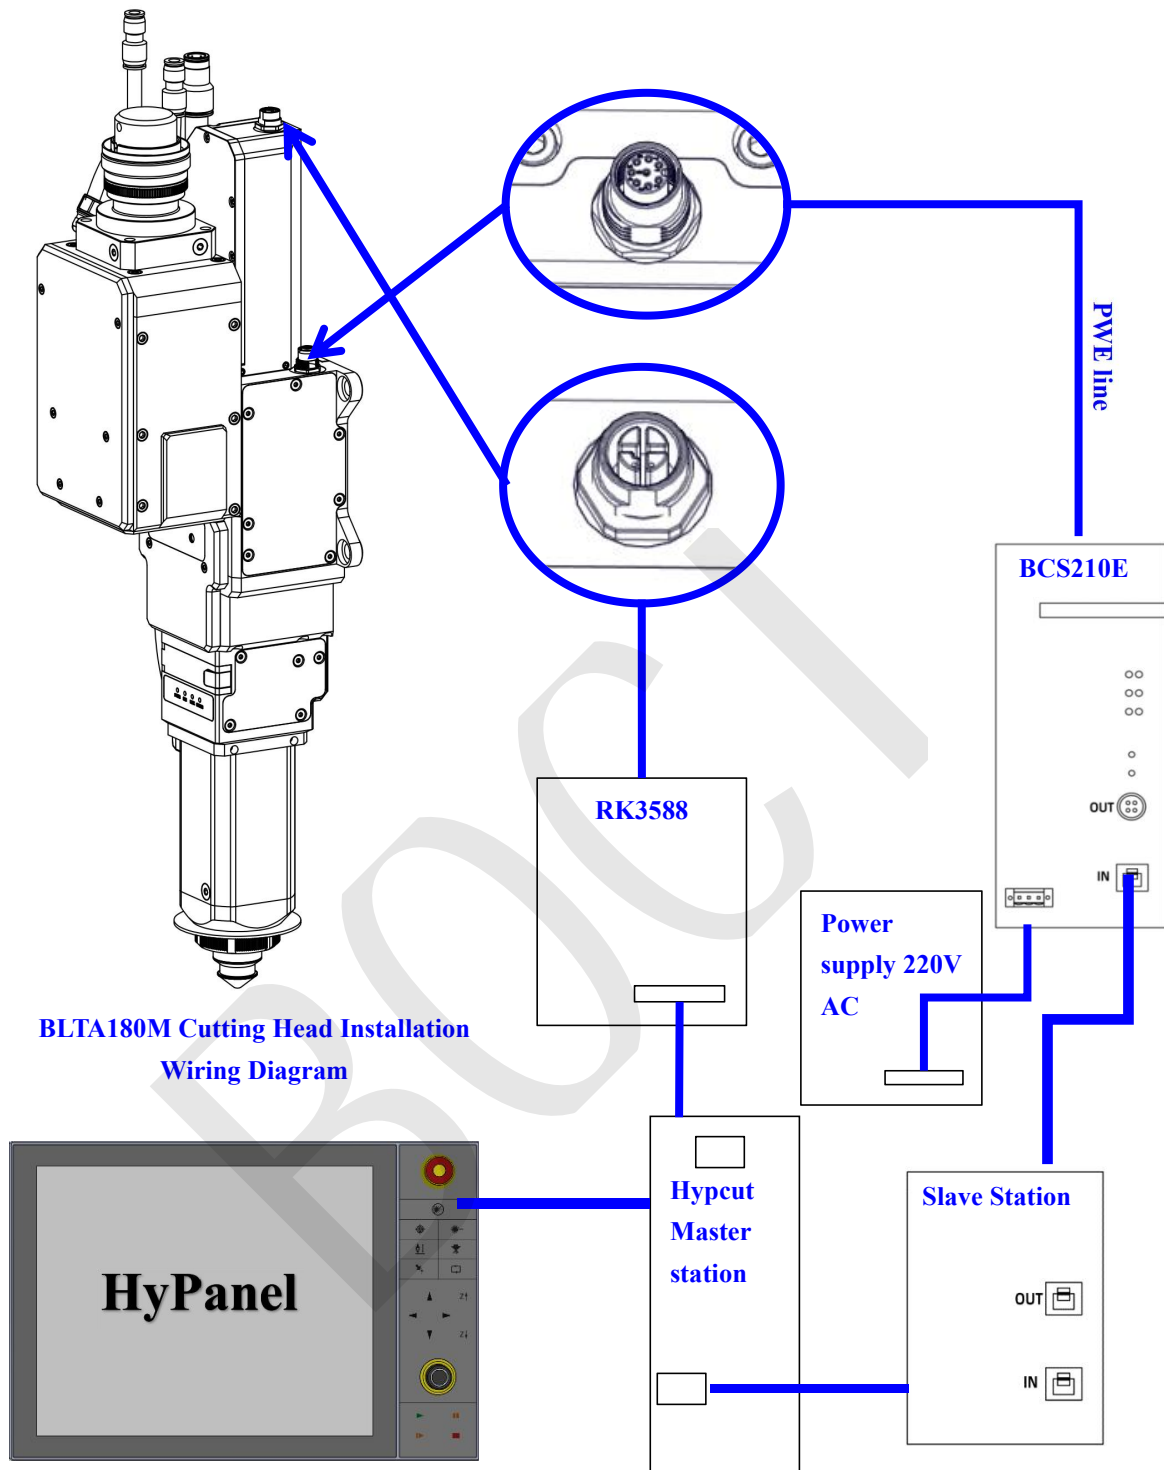

Notice:

- The above wiring operations should only be performed by trained and professional personnel.
- When the cutting head is connected to the BCS210E, the BCS210E must be powered off.


5. Cutting Head Installation

During the installation of the cutting head, dust or dirt may accidentally enter the cutting head, contaminate the optical lens, and affect its normal functions. To prevent dust or dirt from entering the cutting head, please refer to the following methods for the installation of the cutting head:

5.1 Preparation before operation

The following objects are required before operation:

- Cutting head;
- Clean workbench (clean workbench type: vertical purification; cleanliness level: ISO 5, 100; average wind speed $\geq 0.4\text{m/s}$);
- Cleaning kit: strong light flashlight, absolute ethanol (or IPA), dust-free purification cotton swab, dust-free cloth, compressed air dust removal tank (or air blower).

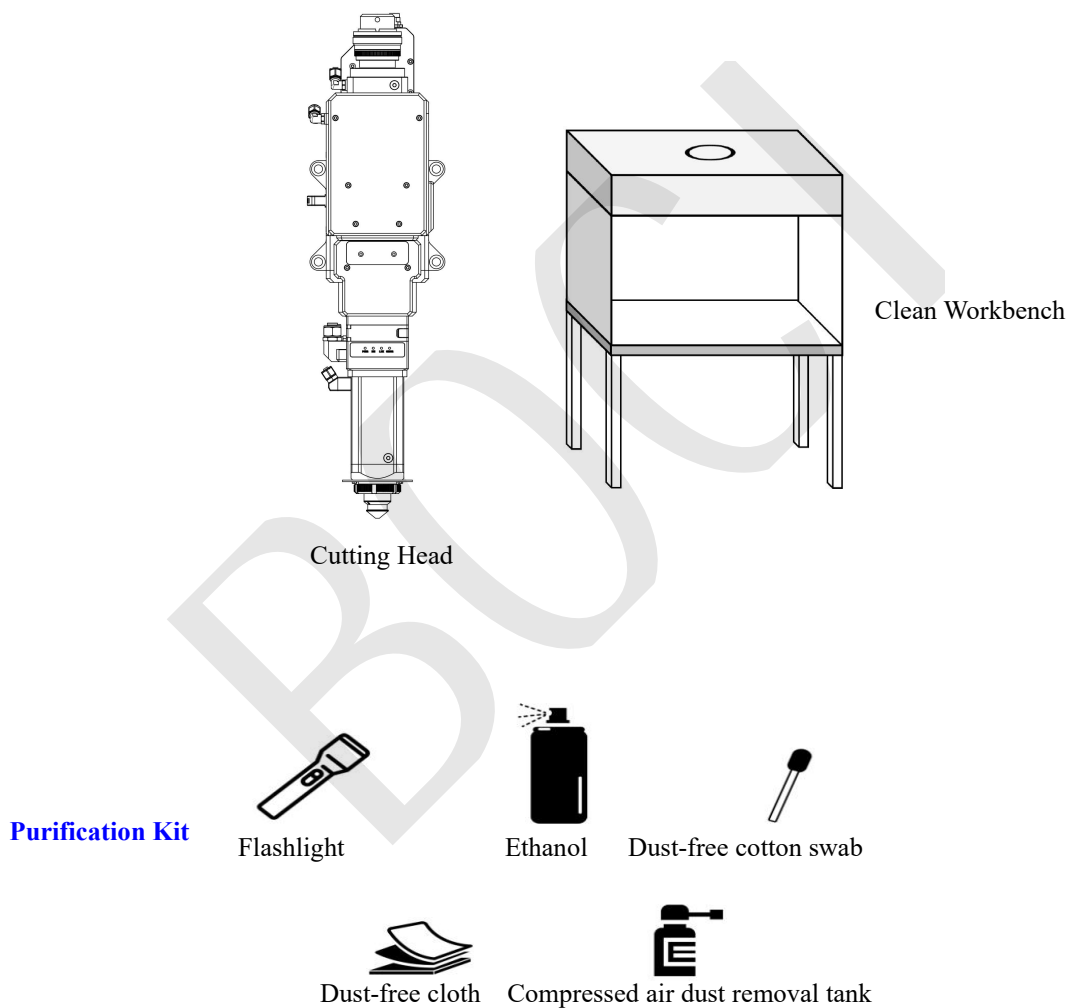

Notice:

- The above operations can only be carried out by personnel who have received appropriate training and have professional knowledge.
- In order to ensure the normal operation of the laser device and the safety of operators, please be sure to follow the relevant operating instructions.




5.2 Specific Operation Process

5.2.1 Preparation of clean bench

Prepare the clean bench, start it up and ensure its functionality:

Clean table type: vertical
purification; cleanliness class:
ISO 5, 100; average wind speed \geq
0.4m/s

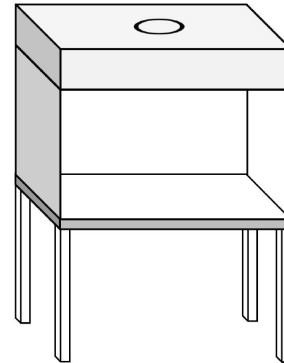

1. Check that the equipment is clean and qualified (checks the cleanliness of the dust particle counter), and confirm that the FFU purification unit is within the validity period (measure the average wind speed in the working area, when the wind speed cannot reach 0.3m/s, the FFU purification unit must be replaced);
2. Check whether each switch is running normally, and check whether the fan is running normally;
3. It is strictly forbidden to install unnecessary items in the clean working area to ensure that the clean air flow is not disturbed;
4. For clean workbenches that are newly installed or have not been used for a long time, please use a clean cloth and anhydrous ethanol to wipe them clean before use;

During operation:


1. Turn on the power, and pull the glass sliding door of the clean workbench to the lowest position (leaving a gap of about 10cm);
2. Start the fan, it is recommended to purify the clean table for about 30 minutes in advance;
3. Turn on the light source of the clean workbench.

5.2.2 The Cutting Head is placed in the clean workbench

Put the cutting head horizontally inside the clean workbench.


Notice:

To prevent dust from contaminating the core area of the cutting head, please ensure the integrity of the special protective film/cap for the optical fiber interface before plugging and unplugging the optical fiber.

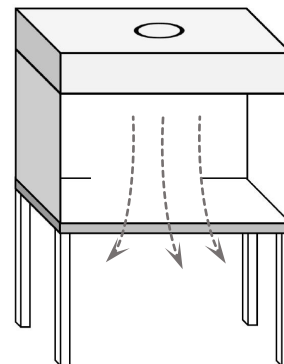

5.2.3 Clean and wipe the fiber interface of the cutting head

Wipe the fiber interface of the cutting head with a clean cloth and anhydrous ethanol.

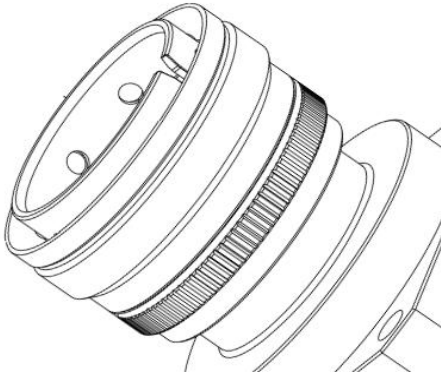

5.2.4 Check the laser fiber end face


Remove the protective cap of the laser fiber, and irradiate the end face of the fiber with a strong flashlight to observe whether there is any pollution; if it is clean, you can directly insert the fiber;

5.2.5 Tear off the protective film/remove the protective cap

Remove the special protective cap/protective plug for the optical fiber interface on the cutting head.


5.2.6 Insert the laser fiber interface into the cutting head

Align the fiber optic plug with the red dot, insert it into the unlocked fiber optic port, and ensure that it is inserted as far as it will go. Rotate the lock cap until it tightly locked.

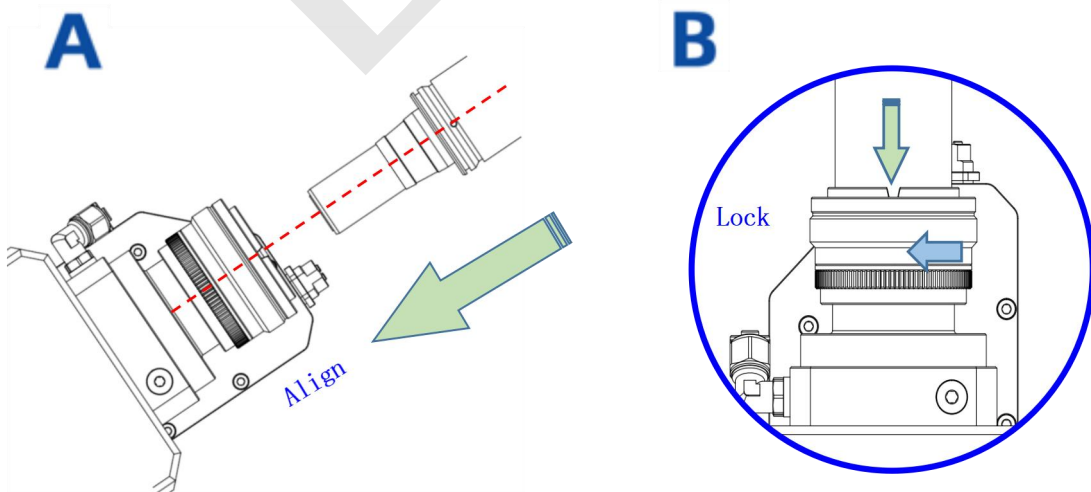

5.2.7 Wrap and Seal

After inserting the optical fiber, wrap and seal the interface between the optical fiber and the cutting head with tape.

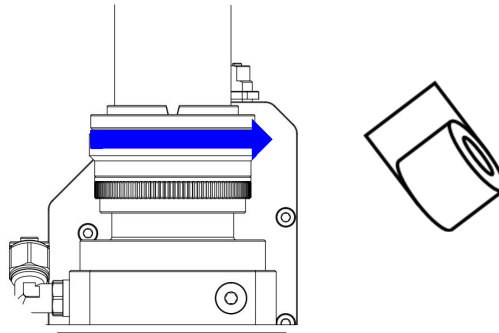

Tape wrap seal



Notice:

To achieve effective sealing, it is recommended to wrap the tape at least three times for sealing.

5.2.8 Mount the Cutting Head on the backplane

The cutting head can be installed on the Z-axis backplane of the machine tool through four screws A, B, C, and D. When fixing the cutting head on the machine, it must be ensured that the cutting head is locked and there is no obvious movement.




A

B


C

D

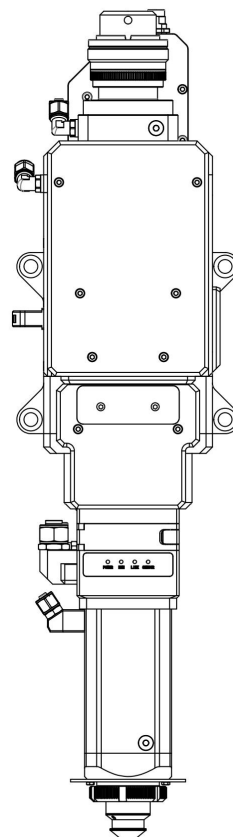

5.2.9 Installing the Ceramic Body and Nozzle

Install the ceramic body and secure with the locking ring, then install the nozzle.

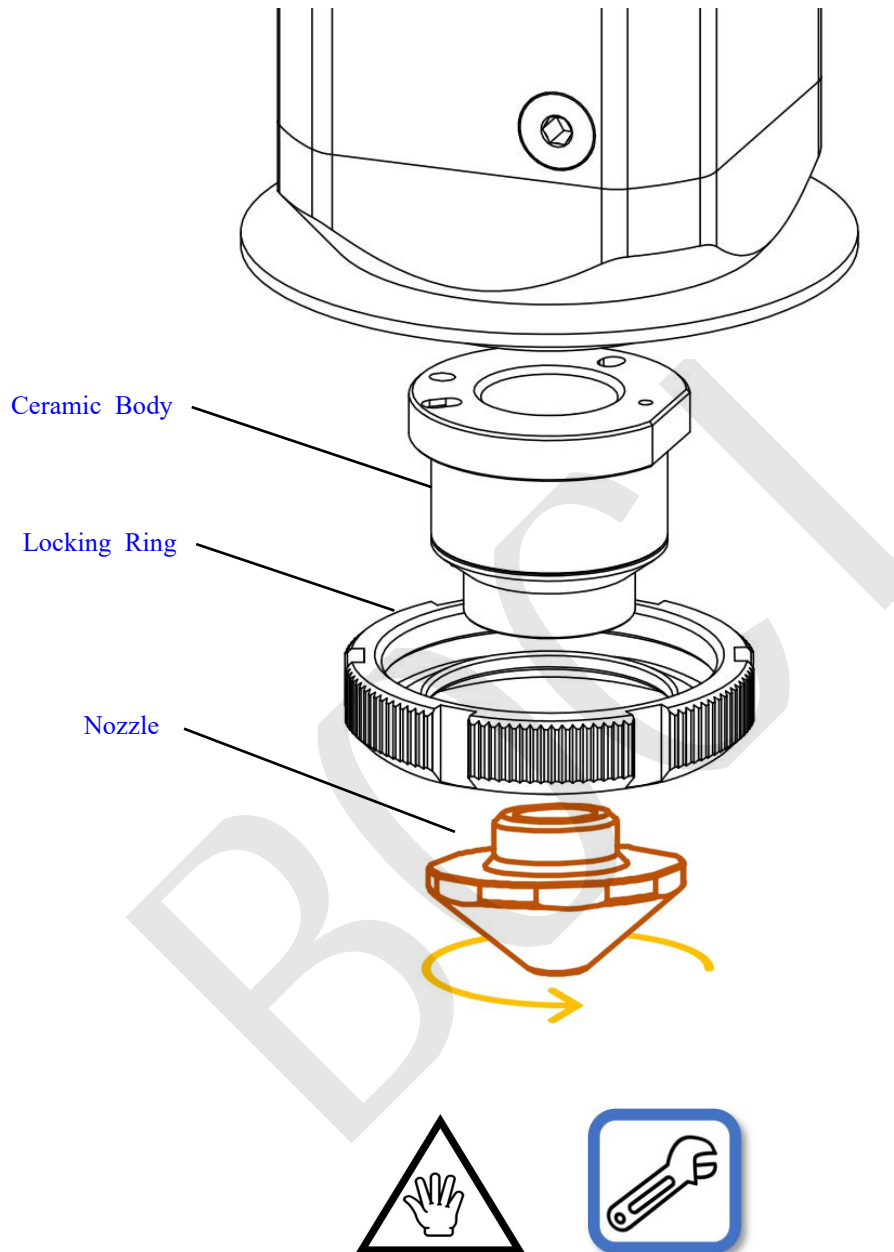

Tighten the nozzle on the ceramic body by hand

lock the ceramic body lock ring using wrench

5.2.10 Beam Centering

Adjust the XY centering knob to make the focal point in the center of the nozzle by low-power dotting.

 



The conditioned laser beam must be in the center of the nozzle.




Tape


X/Y
adjustment
screw

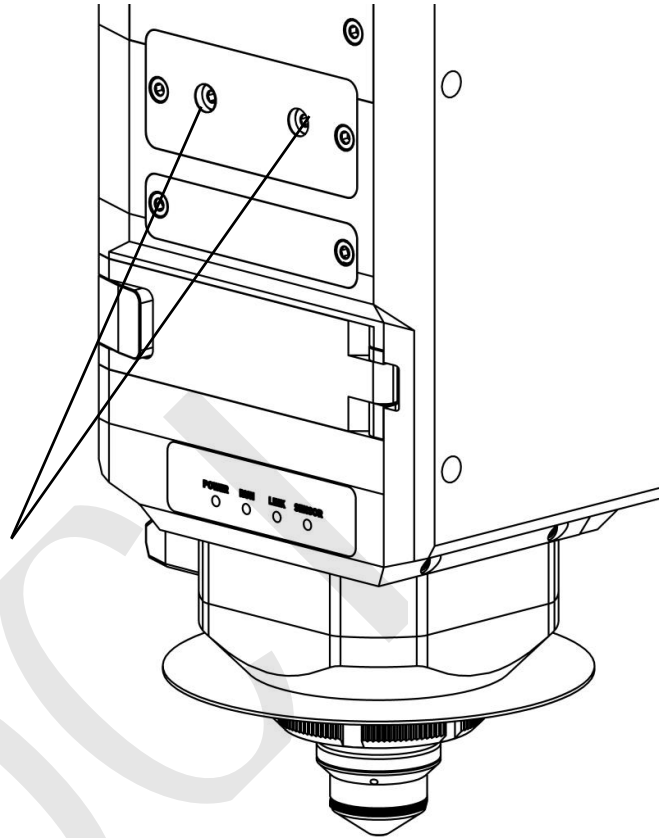

Relative position of laser beam

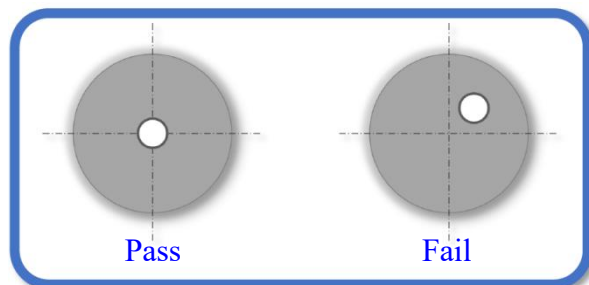


Appendix A - Care/Maintenance

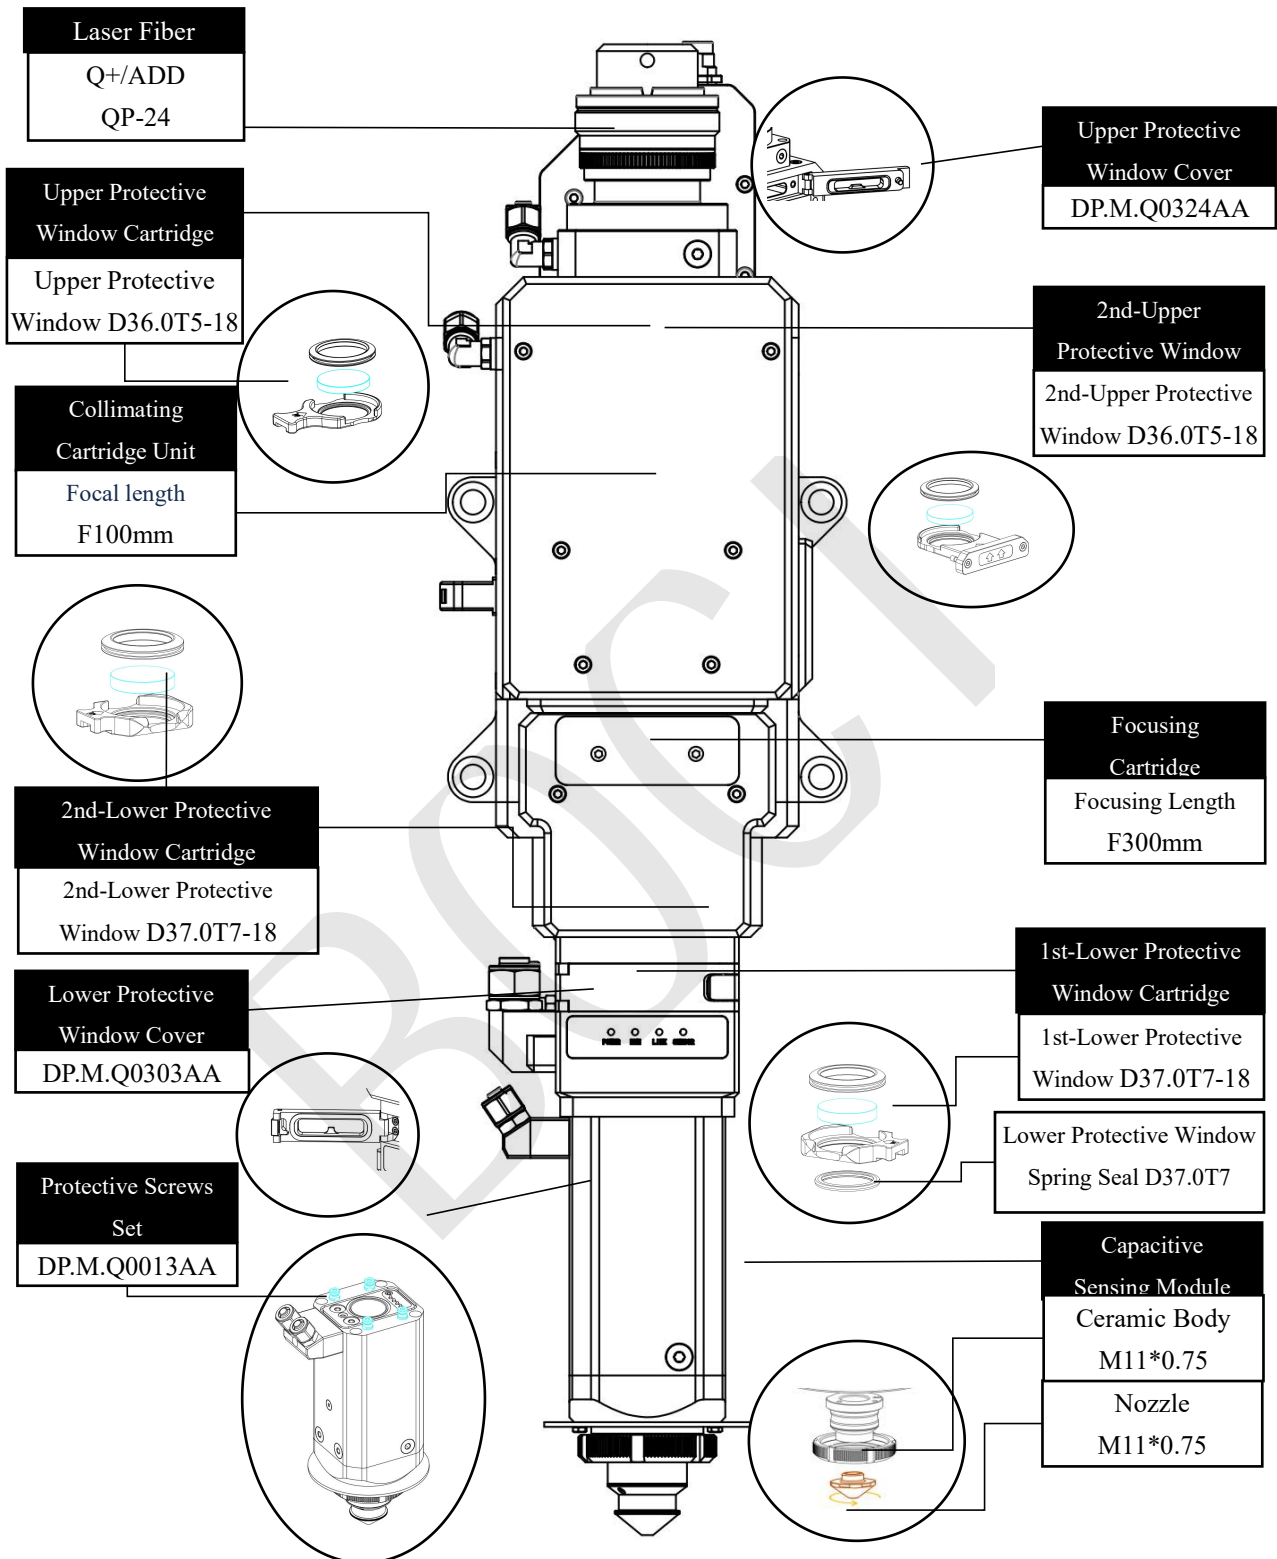


A.1 Schematic Diagram of Product Structure


A.2 Replace the 1st Upper Protective Window

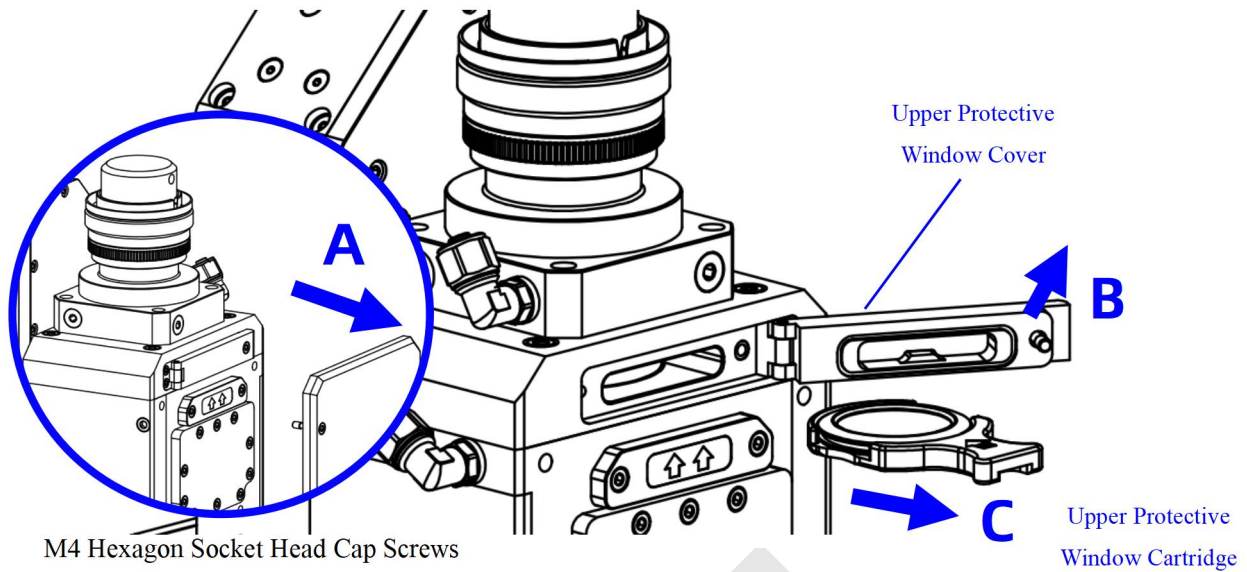


1. Open the protective cover;
2. Pull out the upper protective window cartridge;
3. Close the protective window cover to prevent dust from entering;
4. Remove the pressure ring on the protective window;
5. Replace the protective window;
6. Open the upper protective window cover;
7. Insert the upper protective window cartridge into the cutting head.

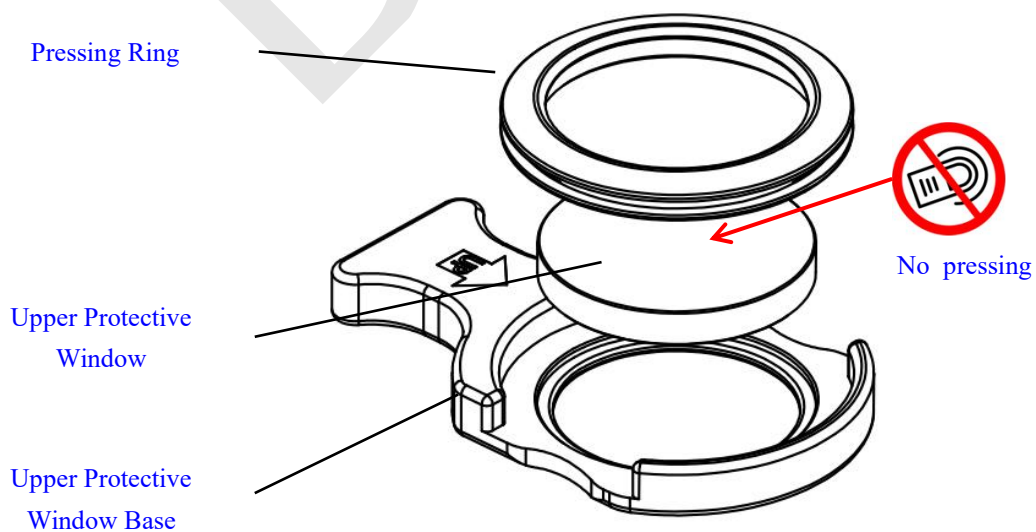


A.3 Replace the 1st Lower Protective Window

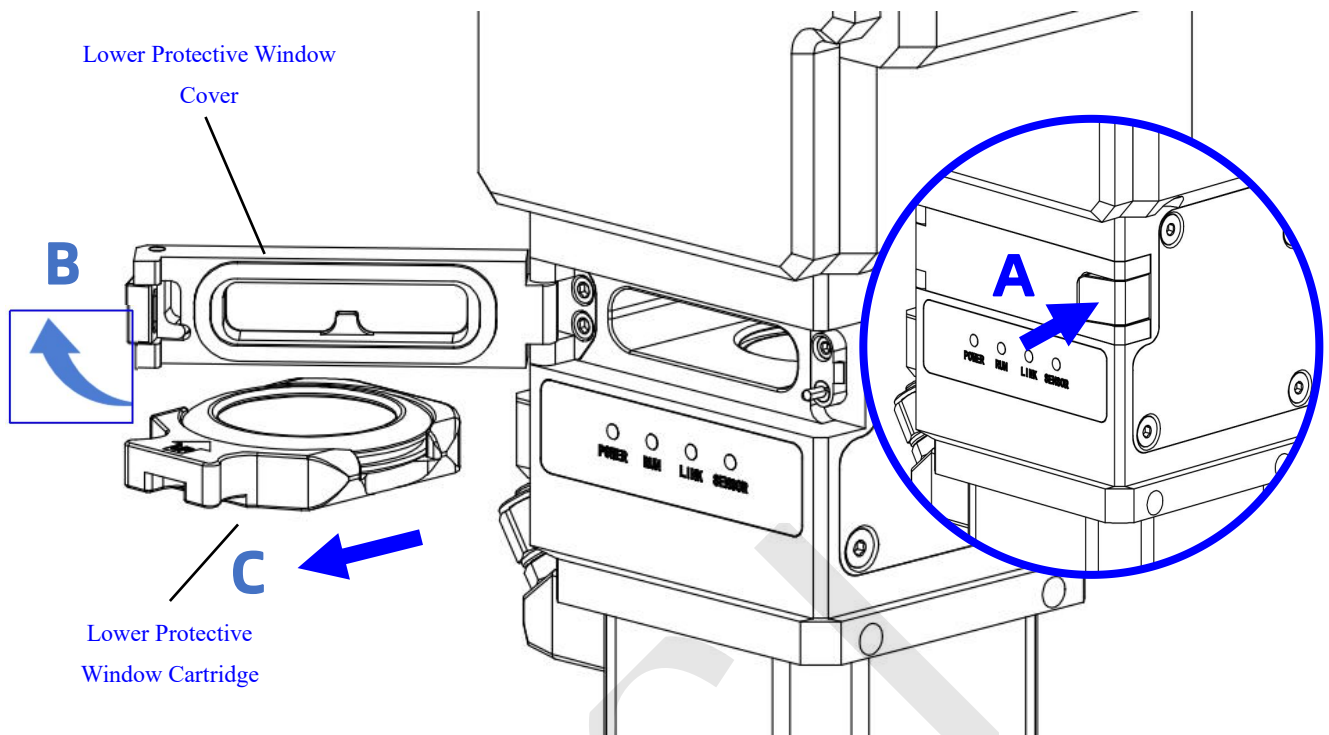


1. Press the catch to open the lower protective window cover.
2. Pull out the lower protective window cartridge.
3. Close the protective door of the lower protective window cartridge to prevent dust from entering.
4. Replace the lower protective window.
5. Insert the pressure ring and press it firmly.
6. Open the lower protective window cover.
7. Insert the lower protective window cartridge.
8. Close the lower protective window cover.

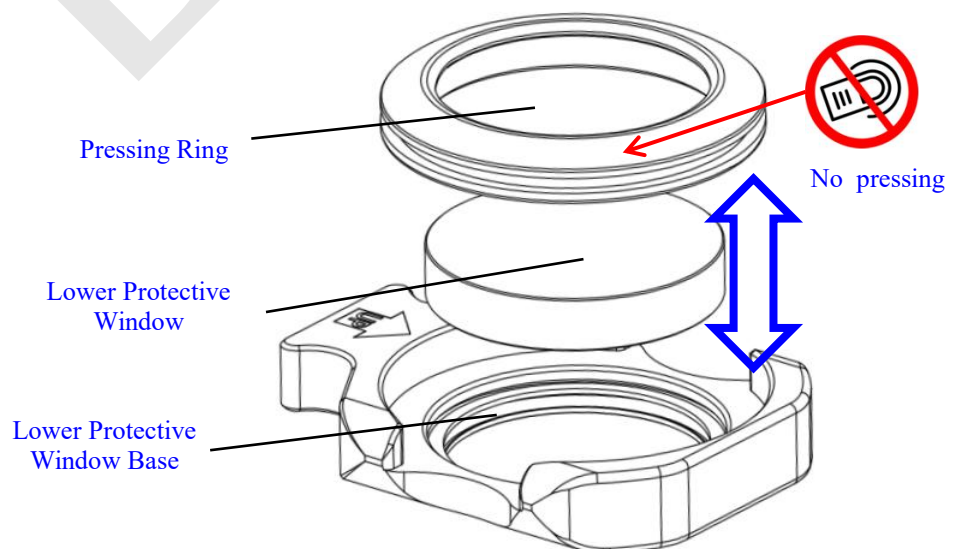

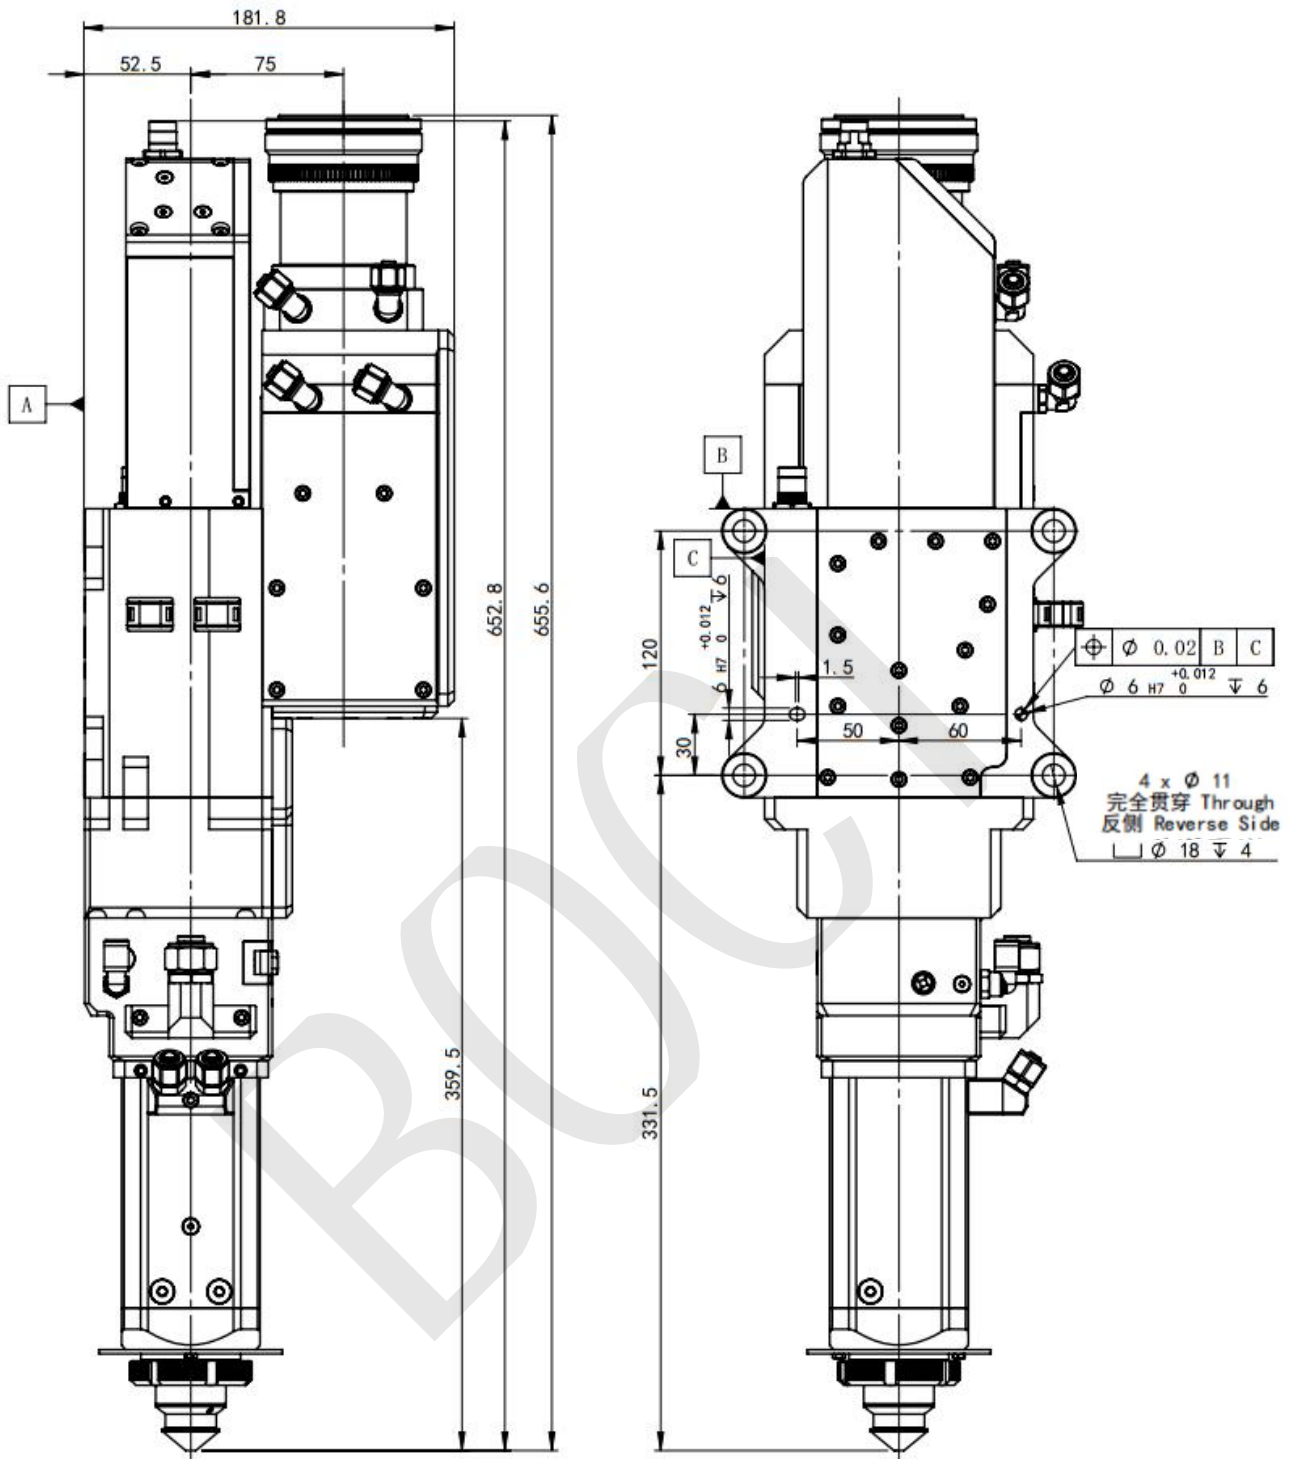
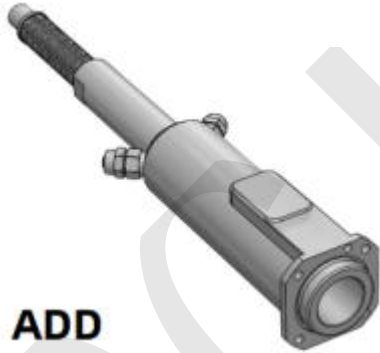
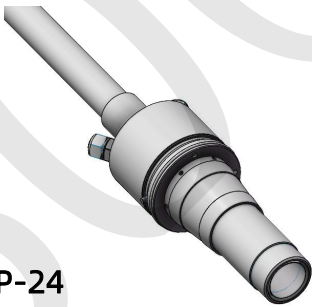


BLTA180M-QP-24

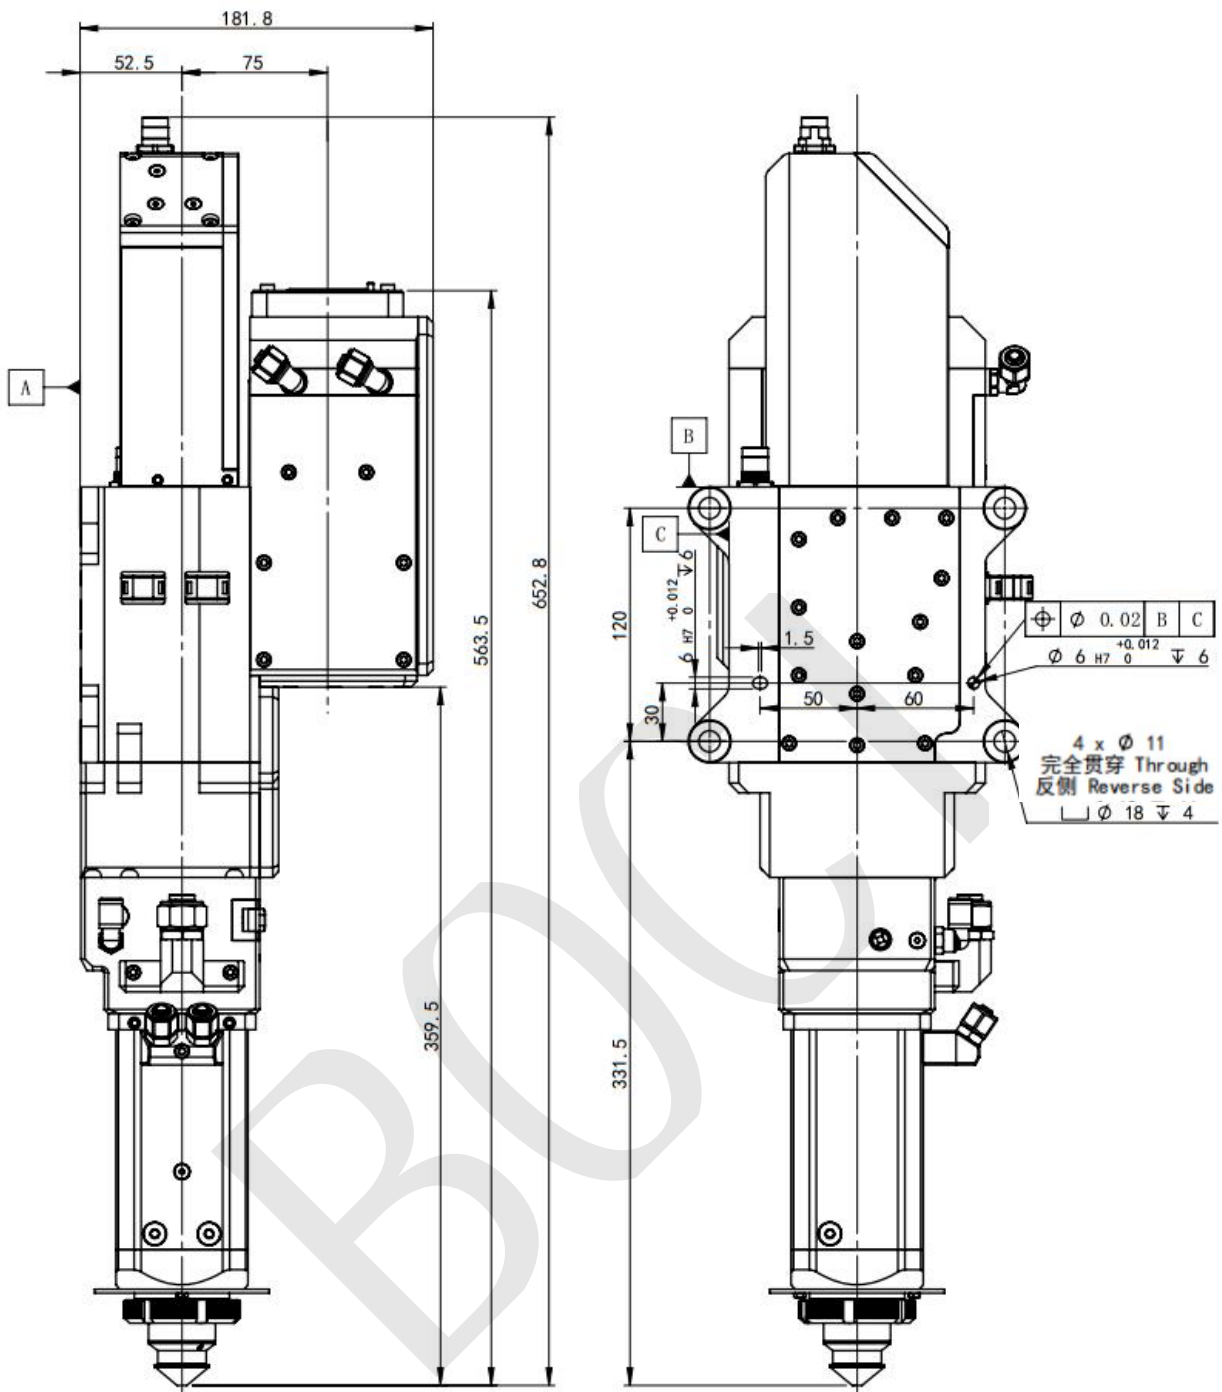

BLTA180M-ADD

B.2 BLTA180M Fiber Interface Types

Universal Fiber Interface	Image	Compatible Fiber Interface
Q+	 <p>Q+</p>	<ul style="list-style-type: none"> ● Raycus QP ● IPG HLC-16
ADD	 <p>ADD</p>	<ul style="list-style-type: none"> ● BWT QF-D ● Max Photonics LOE 3.2 ● Feibo HOC
QP-24	 <p>QP-24</p>	<ul style="list-style-type: none"> ● Raycus QP-24 ● IPG HLC-24