

# Register Account by Email

## Pre-knowledge

- Email registration requires online environment.
- Free trial only available when the device never activate CypNest and get trial before, and trial period is 3 days. For longer trial please contact CypNest support by email support@fscut.com.
- CypNest trial can only login the same device that register the account. Subscription user can log in different device.
- For international users it's recommend to use email account.

## Register Steps

1. Double click desktop icon open log in page. Select log in by email.



2. Open email log in page to register account. Click register will open a web page to complete registration.

Logining... X

Email

Please Input Email

Password:

Login Cancel

Register Forgot password

Use IE proxy server  Login By Email

3. Input your email and click 'Get captcha' will send a verification code to your email. Fill the code and click submit enter next step.

Exist account, [Login](#)

1 Verify ————— 2 Input ————— 3 Completed

Email

Captcha  [Get captcha](#)

[Homepage](#) [Contact Us](#) [Disclaimers](#)  
CopyRight@Shanghai Friendess Electronic Technology Co., Ltd.

4. Fill all the blanks required and click 'Apply trial' button.

Please fill the blank to get trial(\* means required)

\*Name

\*Email

Company

\*Type

\*Main business  
 Take production order  Lamp  Electric instruments  Kitchen ware  Elevator  
 Mechanic

\*Owned machine number

Tip: Register by WeChat can get 1 month trial, register by email can get 3-day trial, confirm use email please continue

5. Get trial succeed, it will enter into web subscription center where you can check your trial or subscription status, service time and other operation history.

Welcome, 付雨露, You have already logged in 1401times. Last log in time 2020/12/3 16:31:45, Logged in device FSCUT-PC My profile

My subscription   Order history   Reward   **Online history**   Purchase(renew)   Activate

You have succeeded Log in CypNest 932times; Log in TubesT 469times; You have created 691 nest task(s), executed 1394 auto nest task(s), exported 367 nest task(s);

Last log in time 2020/12/3 16:31:45, Logged in device FSCUT-PC.

NO.	Product	Device	Log in time	Log in status	Log out time
1	CypNest	FSCUT-PC	2020-12-03 16:31	Log in succeed	<span style="background-color: orange; color: white; padding: 2px 5px;">quit</span>
2	CypNest	FSCUT-PC	2020-12-03 16:23	Log in succeed	2020-12-03 16:23
3	CypNest	FSCUT-PC	2020-12-03 16:23	Log in succeed	2020-12-03 16:23
4	CypNest	FSCUT-PC	2020-12-03 15:09	Log in succeed	2020-12-03 16:01
5	CypNest	FSCUT-PC	2020-12-03 14:52	Log in succeed	2020-12-03 14:53
6	CypNest	FSCUT-PC	2020-12-03 14:07	Log in succeed	2020-12-03 14:51
7	CypNest	FSCUT-PC	2020-12-03 14:07	Log in succeed	2020-12-03 14:07
8	CypNest	FSCUT-PC	2020-12-03 12:02	Log in succeed	2020-12-03 13:18
9	CypNest	FSCUT-PC	2020-12-03 11:57	Log in succeed	2020-12-03 12:02
10	CypNest	FSCUT-PC	2020-12-03 11:57	Log in succeed	2020-12-03 11:57

[User manual](#)   [Video tutorials](#)   [Friendess official website](#)   [Online support](#)   [Email:support@fscut.com](mailto:support@fscut.com)

6. Return to desktop login page and log in again.

X

### Logging...

Email

934423432@qq.com

Password:

●●●●●●●●

Login

Cancel


Register

Forgot password

Use IE proxy server

Login By Email

7. If get trial succeed you can log in again to start using CypNest.

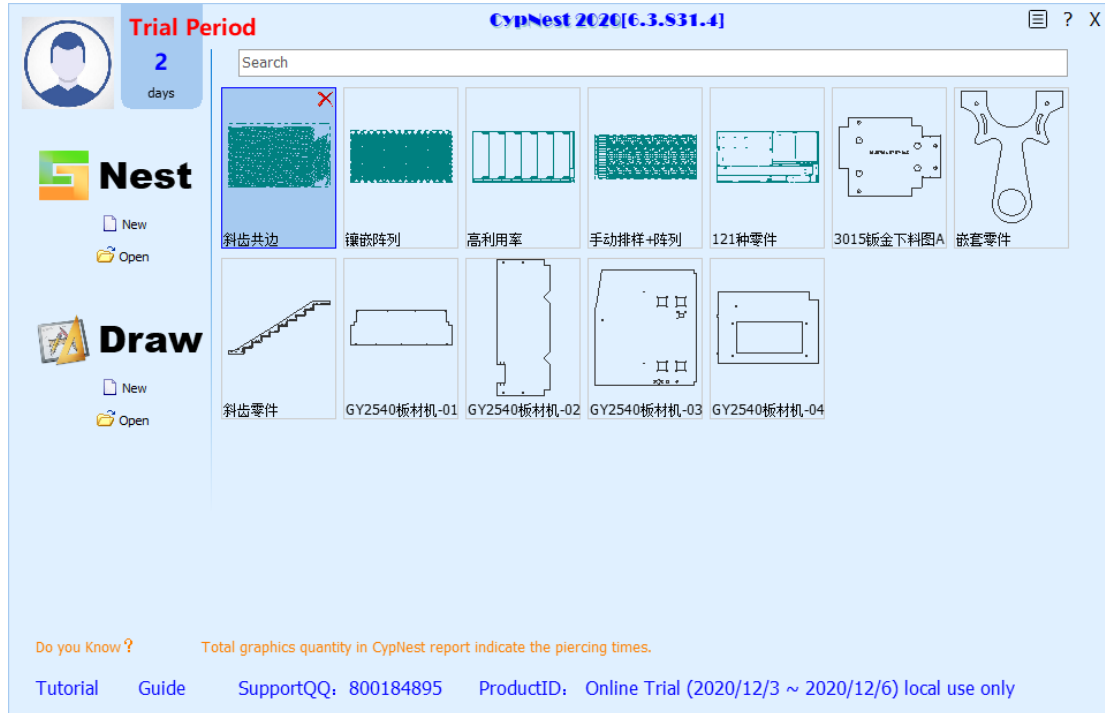

8. If log in failed you need to enter in online subscription center to subscribe the product.

